

Deviatie tabel PH-VSQ

mei 2010

FOR	N	030	060	E	120	150
STEER	001	030	059	089	119	148
deviatie	-1	0	1	1	1	2
FOR	S	210	240	W	300	330
STEER	178	211	240	273	302	332
deviatie	2	-1	0	-3	-2	-2

Compass Heading = Magnetic Heading – deviatie (deviatie Oost=pos, West=neg)